


## COMPLETE PARTS LISTING



- ① Charging Case x 1
- ② Hearing Aid x2 (Left / Right Unit)
- ③ Ear Cap (L, M, S, Tiny x 2)
- ④ AC Adapter
- ⑤ AA Battery x 1
- ⑥ Cleaning Brush x 1

## HEARING AID FEATURES

### Charging Case

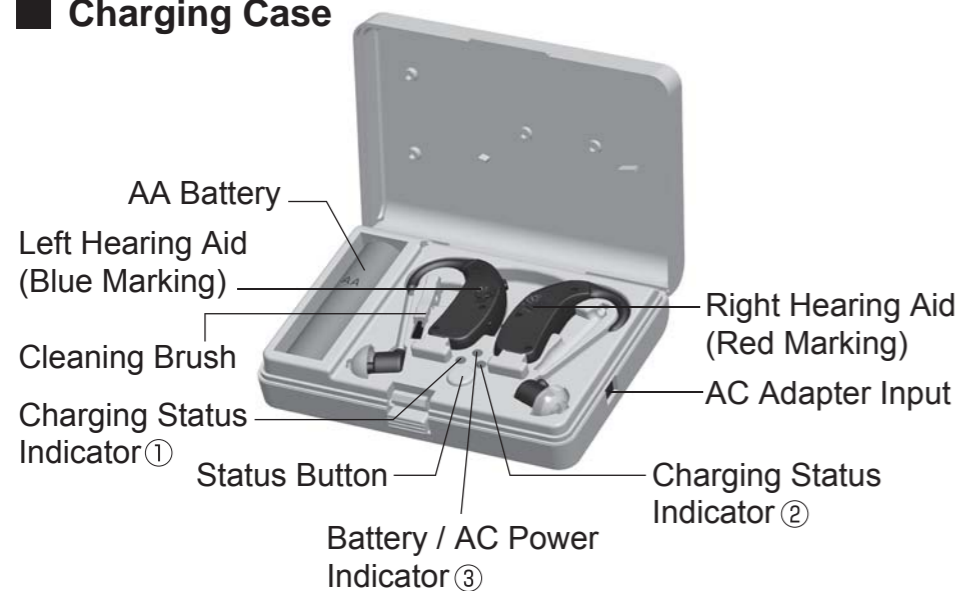

### Hearing Aid



## OPERATING INSTRUCTIONS



Remove the Hearing Aid from the case.



Turn the power on and rotate the Volume Knob to the desired volume level.




Place the device in your ear.



Fit the Hearing Aid with proper ear cap.

## ADJUSTING THE VOLUME

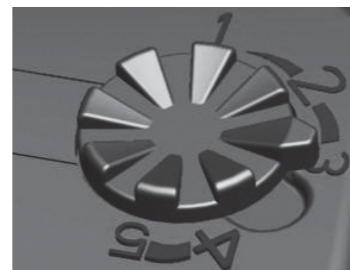

The Volume Knob allows you to adjust the volume. Setting 1 is the lowest, while setting 5 is the highest. Rotate the knob to the desired volume level.

※ Warning: It might cause further hearing damage at inappropriate volume level.


Setting 1	Audio Gain < 20dB	Perfect for hearing loss below 45dB
Setting 2	Audio Gain < 40dB	Perfect for hearing loss below 65dB
Setting 3	Audio Gain < 50dB	Perfect for hearing loss below 75dB
Setting 4	Audio Gain < 55dB	Perfect for hearing loss below 95dB
Setting 5	Audio Gain ≤ 55dB	Perfect for hearing loss below 105dB

## CHARGING

- ※ Ensure that the switch must be in the ON position.
- ※ Place the Hearing Aids in the Charging Case for 8 hours at least, no matter when the Charging Status ① ② Indicator is not lit. Turn OFF the Hearing Aids when not in use for a long period of time.


### To recharge using AC adapter

1. Insert the AC adapter as shown. Please ensure the switch is ON before charging.
2. When the Status Button is pressed, please ensure the Charging Status Indicator ① ② and the AC Power Indicator ③ are green. The Hearing Aids are charging normally.

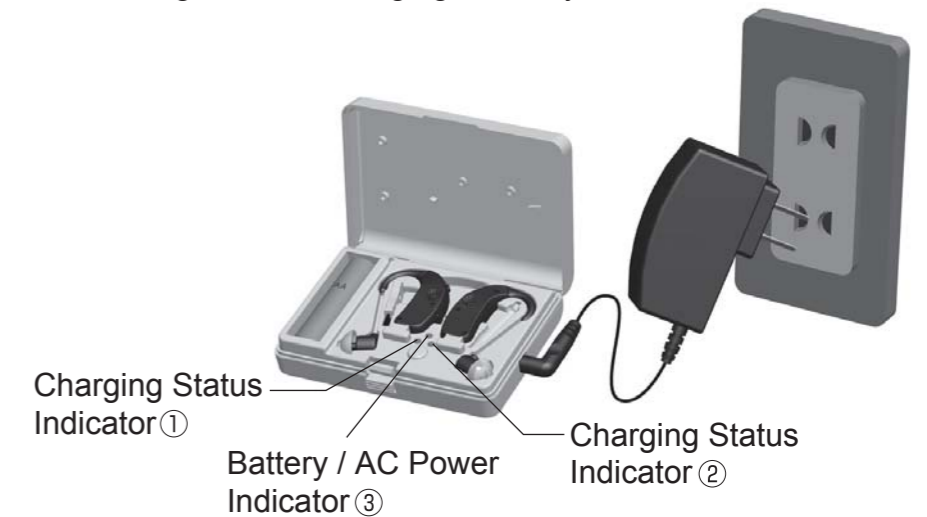


### To recharge using battery

1. Install AA battery into the battery compartment in the Charging Case as shown. Please ensure the switch is ON before charging.
2. When the Status Button is pressed, please ensure the Charging Status Indicator ① ② and the AC Power Indicator ③ are green. The Hearing Aids are charging normally.

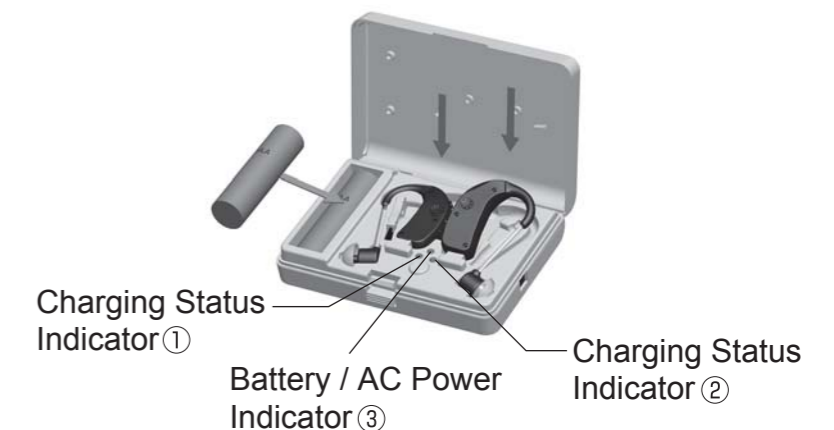

## CHARGE STATUS

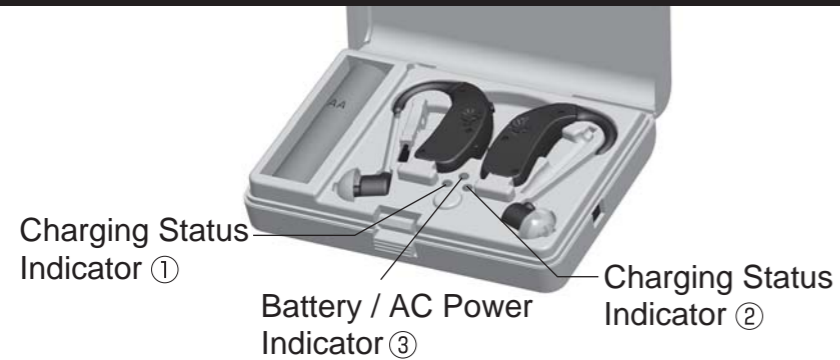


Charging Status Indicator ① ② is green	The Hearing Aids are charging normally.
Charging Status Indicator ① ② is not lit	The charge is complete, the Hearing Aids are OFF, or the contact with the Hearing Aids is improper.
Battery/AC Power Indicator ③ is green	Input power is sufficient.
Battery/AC Power Indicator ③ is red	Input power is low. Insert new AA battery or use the AC adapter.
Battery/AC Power Indicator ③ is not lit	


## EAR CAP REPLACEMENT

The Ear Cap is disposable. If the Ear Cap can no longer be properly cleaned, or if it has any tears or damage, then it is time to replace the ear cap.


1. Remove the old Ear Cap.

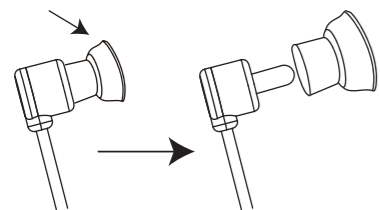


2. Turn up the rim of the new Ear Cap.

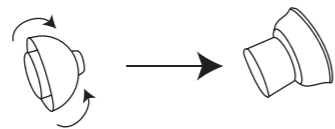

3. Insert new Ear Cap on Hearing Aid.

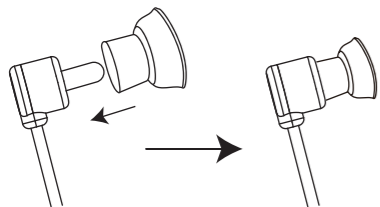

4. Turn the rim of the new Ear Cap down.

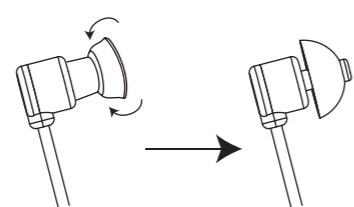

After replacing the Ear Cap and before and after each use, ensure that the Ear Cap is securely attached to the Hearing Aid.

Ear Cap Size	Image
Large	12mm
Medium	11mm
Small	9mm
Tiny	7mm


## CLEANING INSTRUCTIONS

■ Before each use



Thoroughly clean the ear.

■ After each use

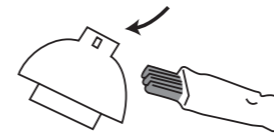

Use the cleaning brush to clean any earwax adhered on the Hearing Aid, especially in and around the Hearing Aid and Ear Cap Nipple.

## NOTICE

- To extend usage life of the rechargeable battery, fully charge the Hearing Aids and then off when not in use for a long period of time.
- Clean your ears with cotton swabs and remove any earwax adhered on the Hearing Aids and Ear Cap Nipple.
- With proper care, the rechargeable battery can last for up to and beyond 300 charge cycles.
- When the rechargeable battery is low on the Hearing Aid, the sound is becoming smaller. It means the battery is low and needs to be charged.
- Keep this product away from infants, children and pets.
- Prior to first use, read instructions carefully to ensure proper operation, care and handling of your Hearing Aids.
- Don't use this product under the following conditions: operating a mobile phone, sleeping, showering, washing your hair / face or swimming, any vigorous exercise to avoid or damage to yourself or to the Hearing Aids.

## TROUBLESHOOTING

1. Is power on?  
Turn on the power switch.
2. Is the Ear Cap blocked with wax or debris?  
Clean the Ear Cap using the provided Cleaning Brush.
3. Is the battery dead?  
Place the Hearing Aids in the Charging Case and ensure it is charging by battery or AC adapter.
4. We suggest a person with a hearing loss periodically have a medical evaluation by a licensed physician in diseases of the ear after using hearing aids.

## SPECIFICATIONS

General Product Description : BTE Rechargeable Hearing Aids

Purpose & Function : For assisting people of hearing obstacle

Standard Frequency : 2500Hz

Max. Output Sound Level Gain : 50±5dB

Continuous Use : 12-16 hours per charge / 300+ recharges

Total Harmonic Distortion Value : 1600Hz : below 4%;

800Hz: below 5%;

500Hz: below 5%

Operating Temperature / Humidity : +10°C~ +40°C · 30~85% RH

Storage Temperature / Humidity : -10°C~ +60°C · 30~85% RH

Battery Type : Button Size Rechargeable Battery

Size (L/W/H) : <Hearing Aid> 36 x 15 x 10 mm

<Charging Case> 96 x 66 x 22 mm

Weight : <Hearing Aid> 6.0g / <Charging Case> 62.5g

Material : <Hearing Aid> ABS

<Charging Case> ABS

<AC Adapter> ABS

<Ear Cap> silicone